


# Vertical Clearance


To provide safer wildfire evacuation routes for residents, and adequate access routes for fire engines, all roadways must be free of obstructions.

Start at the edge of the improved roadway/driveway surface and measure 13-feet, 6-inches straight up from the ground; this area must remain free of obstructions like overhanging tree branches, vegetation, signs, gates, etc.

**CORRECT**

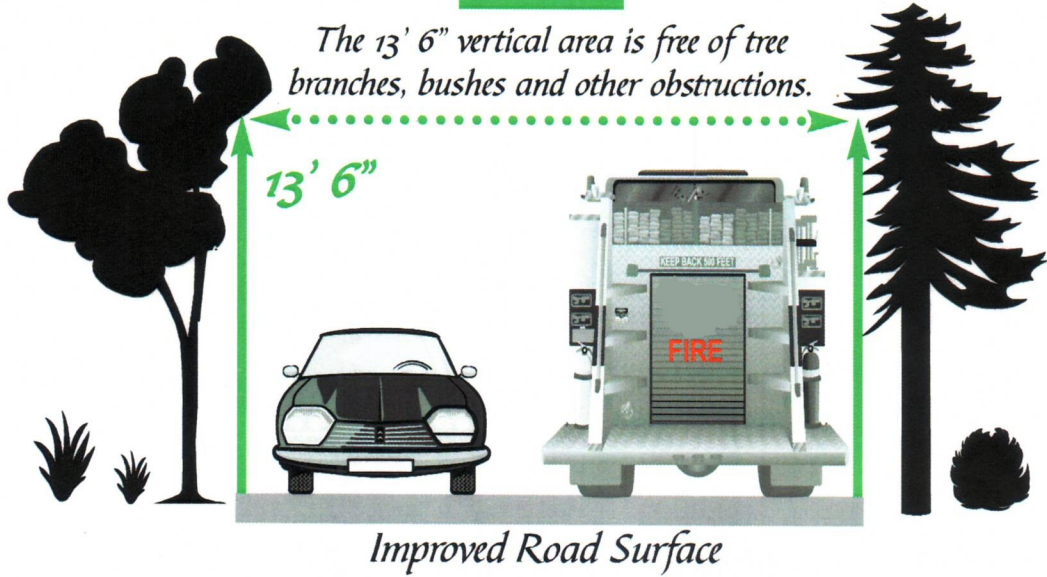

**INCORRECT**

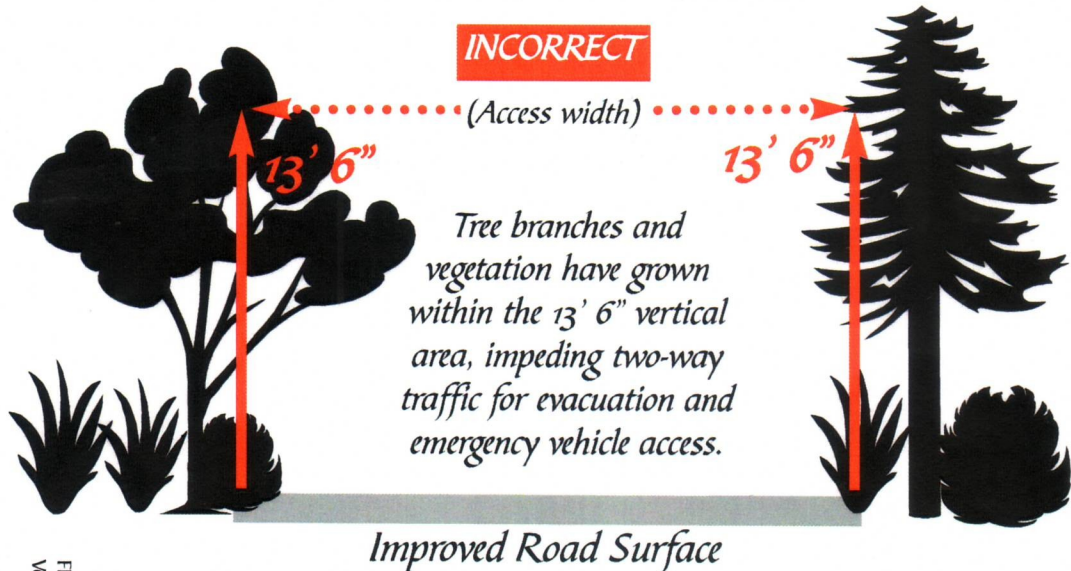

FP 111 12/24/03  
Vertical Clearance

**VISTA FIRE DEPARTMENT**

**200 Civic Center Drive  
Vista, CA 92084  
(760) 643-2801**